


SMC

23 (A)

ATEX Compliant Base-Mounted Type/Plug-in Unit Series 56-VQC1000

How to Order Valves

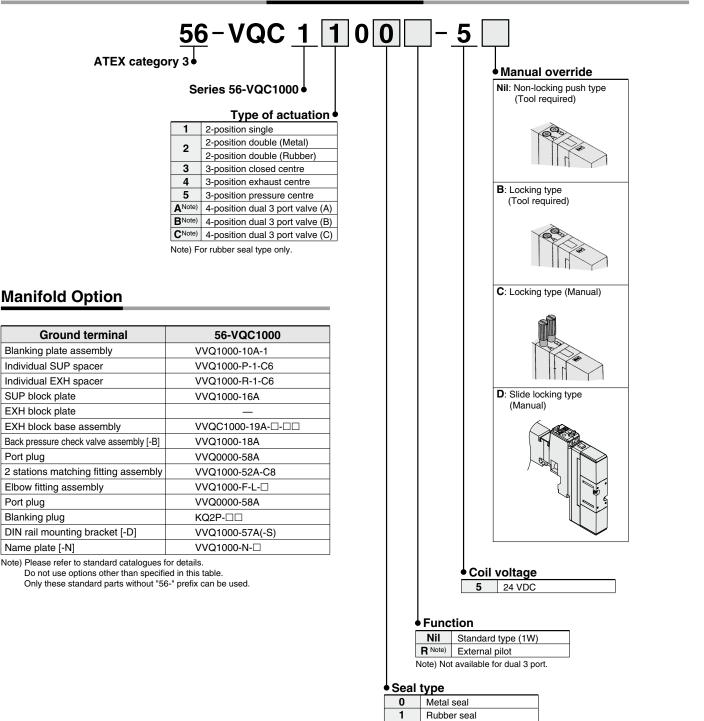

SUP block plate


EXH block plate

Port plug

Port plug Blanking plug

Name plate [-N]

Note) "56-" solenoid valve should be installed in "56-VV5QC11" manifold. Power consumption when starting is 1W, when maintaining 0.35W. "56-VQC" solenoid valve has no polarity"

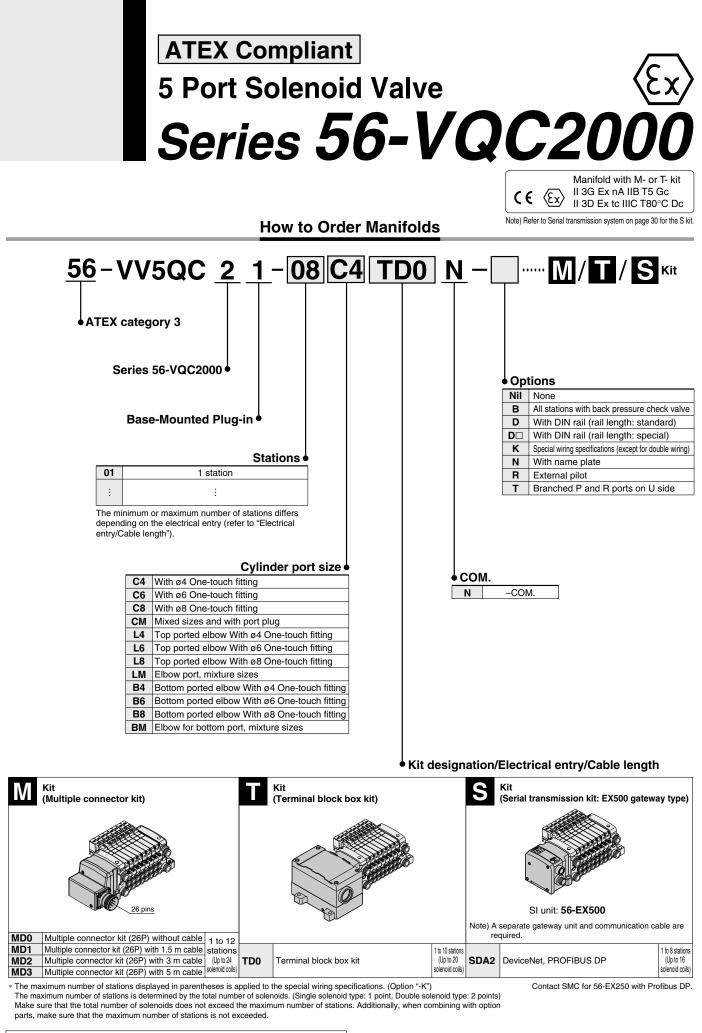


SMC

All other specifications are the same as the standard products Series VQC. Click here for details.

ATEX Compliant Base-Mounted Type/Plug-in Unit Series 56-VQC2000

How to Order Valves

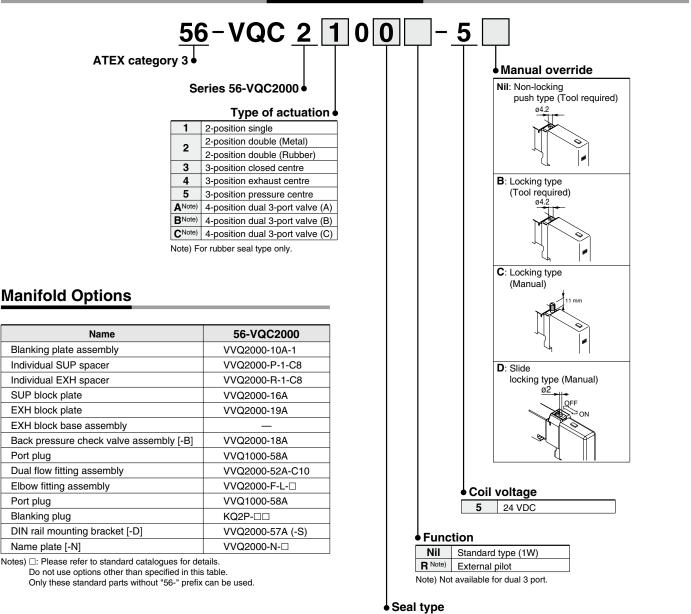


Port plug

Port plug

• Sear type		
	0	Metal seal
	1	Rubber seal


Note) "56-" solenoid valve should be installed in "56-VV5QC21" manifold. Power consumption when starting is 1 W, when maintaining 0.35 W. "56-VQC" solenoid valve has no polarity.

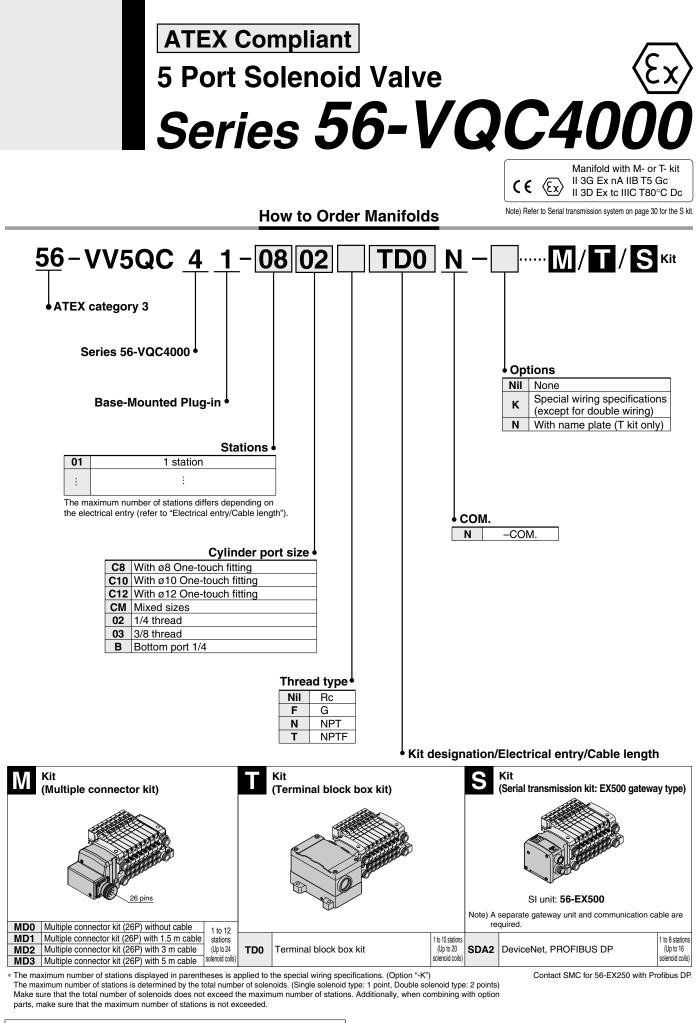

SMC

All other specifications are the same as the standard products Series VQC. <u>Click here</u> for details.

ATEX Compliant Base-Mounted Type/Plug-in Unit Series 56-VQC4000

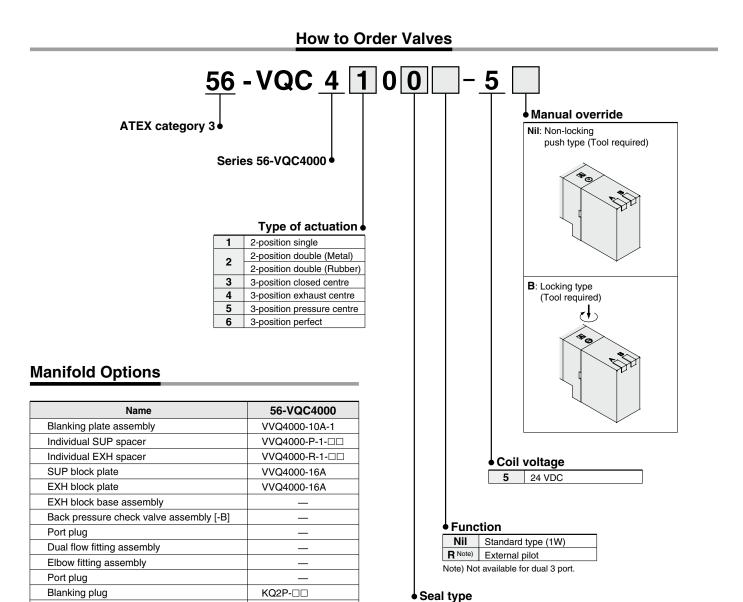

DIN rail mounting bracket [-D]

Notes)

: Please refer to standard catalogues for details. Do not use options other than specified in this table. Only these standard parts without "56-" prefix can be used.

Name plate [-N]

0	Metal seal
1	Rubber seal

Note) "56-" solenoid valve should be installed in "56-VV5QC41" manifold. Power consumption when starting is 1 W, when maintaining 0.35 W. "56-VQC" solenoid valve has no polarity.